




5757 Ravenswood Road  
Ft. Lauderdale, FL 33312  
+1 (954) 981-3333  
+1 (954) 983-5087 Fax  
www.acrelectronics.com  
info@acrelectronics.com

## Sea Shelter™<sub>4</sub>

Mounting Template  
Y1-06-0299 A

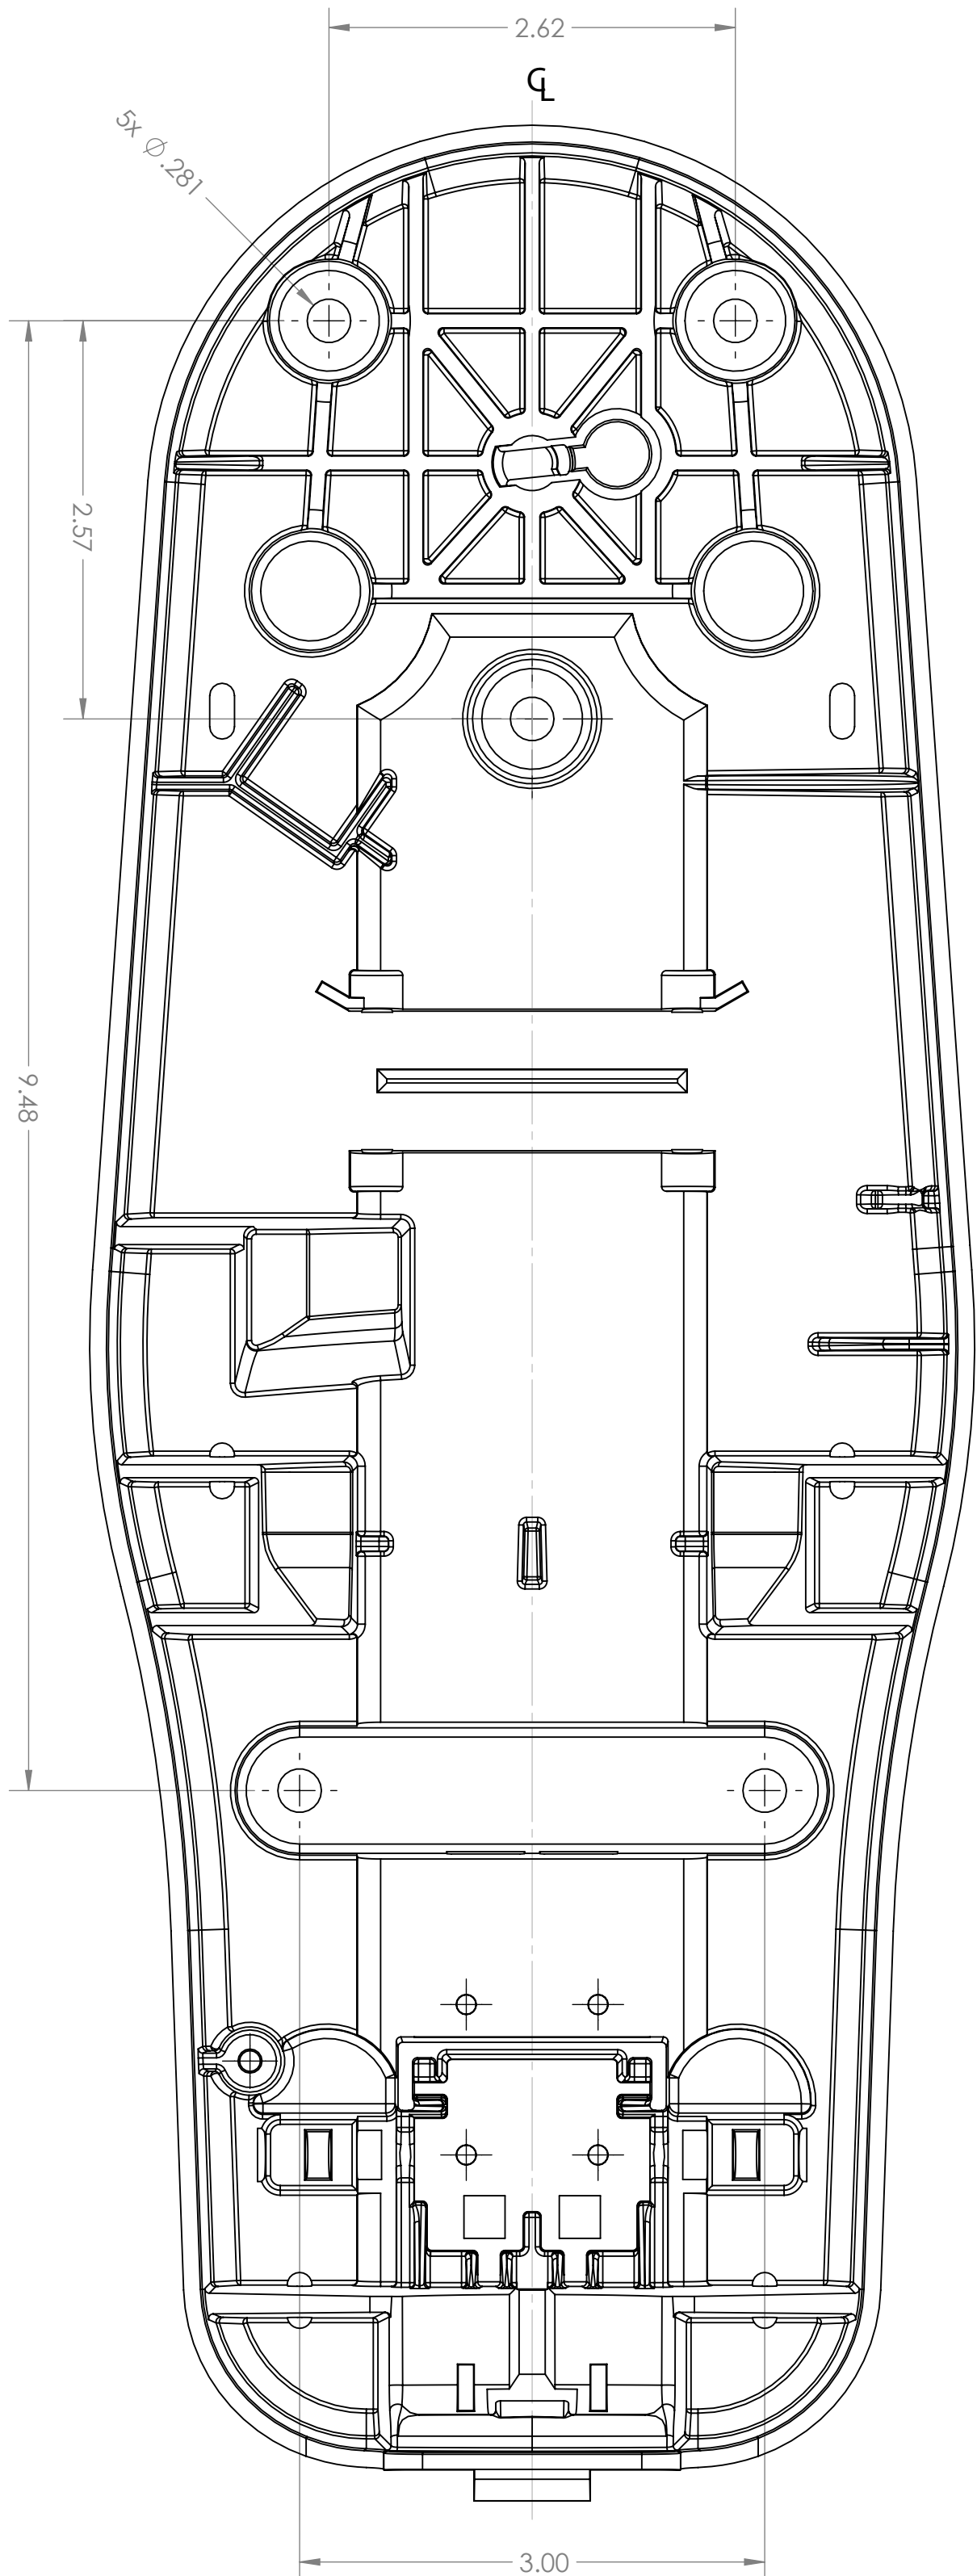

Please Note: If mounting template is obtained from the ACR website, any electronic media, or from a photocopy, please verify the dimensions of the scale shown with actual measuring device. Duplicate templates may not be of true 1:1 scale. Any deviation should be considered when using mounting template.

SCALE 1=1 (in.)  
1=25.4 (mm)

**CAUTION:** Category I brackets must be mounted free from obstruction to allow the beacon to automatically float free from the vessel in case of sinking. The Sea Shelter™<sub>4</sub> can be mounted on a vertical surface with the beacon antenna pointed skyward or a horizontal surface with the beacon face up. Avoid mounting locations that subject the bracket to breaking waves. Avoid structures like dodgers or cabin tops that could trap the beacon upon deployment.