




### LALIZAS Fire Blanket in a PVC Case


Code	Dimension (cm)
70448	100x100
71298	120x180

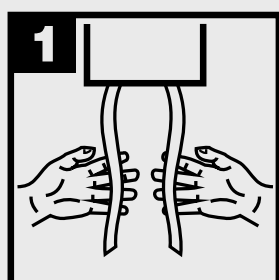

- 1
- GR ΤΡΑΒΗΤΕ ΤΑ ΚΟΡΔΟΝΙΑ ΚΑΙ ΒΓΑΛΤΕ ΤΗΝ ΚΟΥΒΕΡΤΑ
  - UK PULL TAPES DOWNWARDS TO REMOVE BLANKET
  - ES TIRAR DE LAS CINTAS PARA SACAR LA MANTA
  - NL TREK BAND IN NEERWAARTSE RICHTING OM DEKEN TE VERWIJDEREN
  - IT TIRARE LE CINGHIE VERSO IL BASSO PER ESTRARRE LA COPERTA
  - HR POVUCITE TRAKE PREMA DOLJE KAKO BISTE IZVADILI DEKU
  - TR BATTANİYEYİ ÇIKARMAK İÇİN BANTLARI AŞAĞI YÖNDE ÇEKİN
  - PT PUXE A FITA PARA BAIXO PARA TIRAR O COBERTOR
  - RSA TREK TAPE AFVARTS OM KOMBERS TE VERWYDER
  - FR TIRER LES BANDES EN BAS POUR ENLEVER LA COUVERTURE



- 2
- GR ΚΑΛΥΨΤΕ ΠΛΗΡΩΣ ΤΗΝ ΚΑΙΟΜΕΝΗ ΕΠΙΦΑΝΕΙΑ
  - UK COVER BURNING MATERIAL COMPLETELY
  - ES CUBRIR EL FUEGO TOTALMENTE
  - NL BEDEK BRANDEND MATERIAAL COMPLEET
  - IT COPRIRE COMPLETAMENTE IL MATERIALE INCENDIATO
  - HR U POTPUNOSTI PREKRIJTE OBJEKT ZAHVAČEN VATROM
  - TR YANAN CİSMİ TAMAMEN KAPATIN
  - PT CUBRA TOTALMENTE O MATERIAL INCENDIADO
  - RSA PLAAS KOMBERS OOR BRANDENDE AREA.
  - FR RECOUVRIR LE MATÉRIEL BRULANT COMPLÈTEMENT

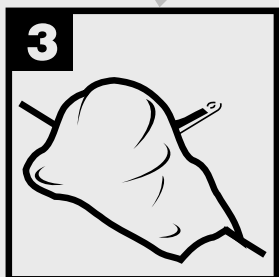

- 3
- GR ΚΛΕΙΣΤΕ ΤΗΝ ΠΗΓΗ ΘΕΡΜΟΤΗΤΑΣ ΚΑΙ ΑΦΗΣΤΕ ΝΑ ΚΡΥΩΣΕΙ
  - UK SWITCH OFF HEAT SOURCE AND LEAVE COVERED UNTIL COOL
  - ES APAGAR ARTEFACTO ORIGINANTE DEL CALOR, DEJAR CUBIERTO HASTA QUE ESTE FRIO
  - NL SCHAKEL WARMTEBRON UIT, LAAT MET BRANDDEKEN BEDEKT TOT AFKOELING
  - IT FINO A SPEGNERE LA FONTE DI CALORE, LASCIARE COPERTO L'INCENDIO FINO A QUANDO LA COPERTA NON SI E' RAFFREDDATA
  - HR ISKLJUČITE IZVOR TOPLINE, OSTAVITE OBJEKT POKRIVENIM DOK SE NE OHLADI
  - TR ISI KAYNAĞINI KAPATIN SOĞUYUNCAYA KADAR BEKLEYİN
  - PT DESLIGUE A FONTE DE CALOR, MANTENHA O MATERIAL COBERTO ATÍ AO SEU COMPLETO ARREFECIMENTO
  - RSA SKAKAL HUTTIE TOE VOER AF EN HOE BEDECK TOT VIR KOEL
  - FR ÉTEINDRE LA SOURCE DE CHALEUR (GAZ OU ÉLECTRICITÉ) LAISSER COUVERT JUSQU'À CE QUE L'ENSEMBLE SOIT TOTALEMENT REFROIDI